


ASSEMBLY INSTRUCTIONS

Portable assembly

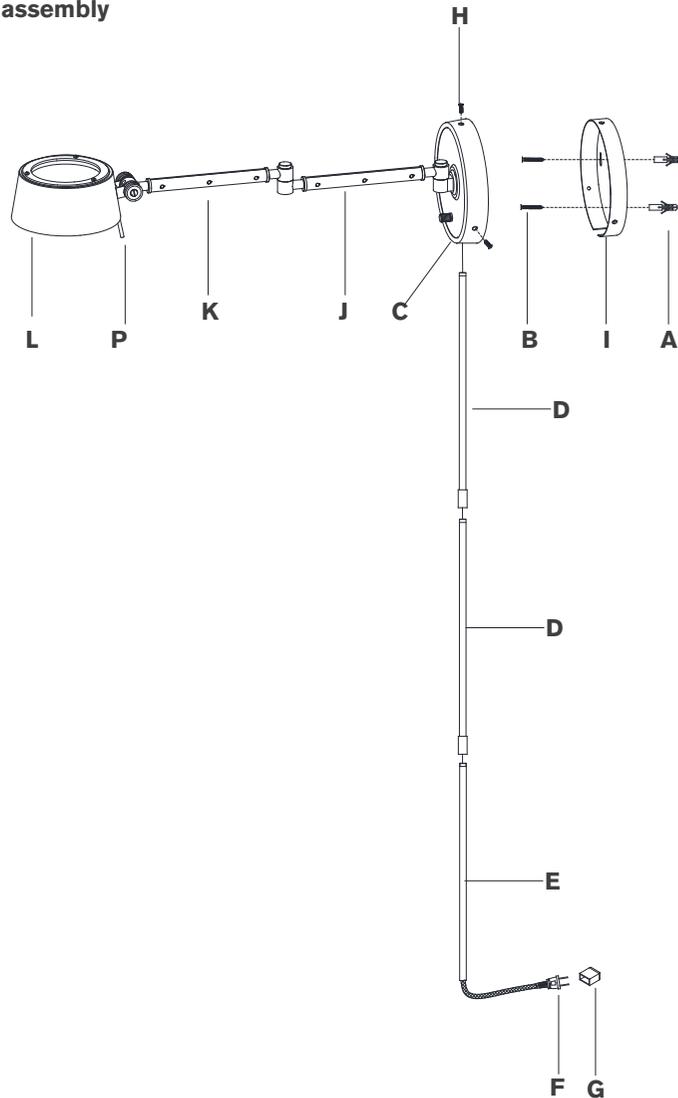

Alaster Articulating Wall Light

Item # RL2170

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Drill
Hammer	Pencil	Scissors

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove portable mounting plate **(I)** from fixture **(C)** by removing screws **(H)**.
3. Using portable mounting plate **(I)** as a guide, mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(A)** into holes using hammer.
5. Install portable mounting plate **(I)** to wall anchors using wood screws **(B)**, then secure fixture body **(C)** to portable mounting plate **(I)** using screws **(H)**.
6. Thread cord covers **(D)** & **(E)** to fixture body **(C)**.
7. Swing arms **(K)** & **(J)** to desired angle.
8. Hold the handle **(P)** to adjust shade **(L)** to desired angle.
9. Remove protective plug cover **(G)** from plug **(F)**.
10. Plug into a proper electrical outlet and test the fixture.


Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

RALPH LAUREN



ASSEMBLY INSTRUCTIONS

Hardwire assembly

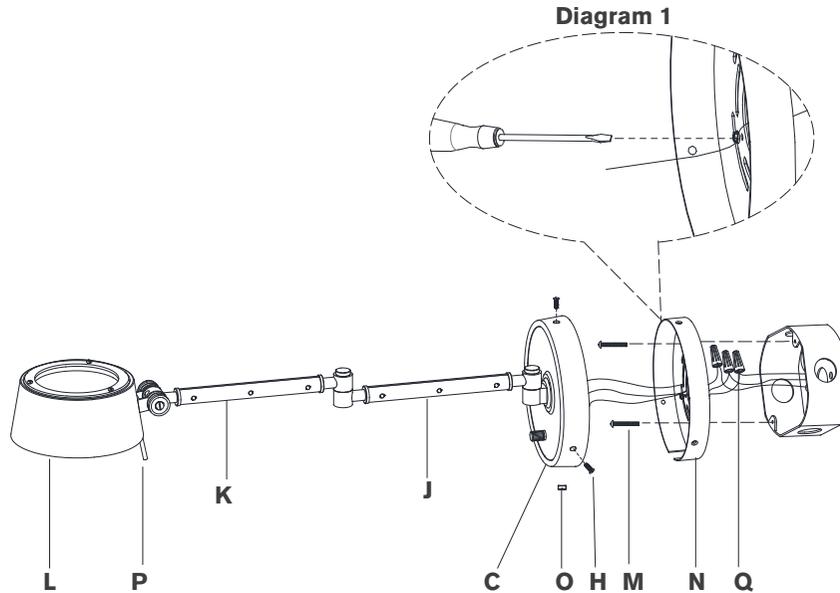

Alaster Articulating Wall Light

Item # RL2170

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver Slotted Screwdriver

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove portable mounting plate (I) from fixture (C) by removing screws (H).
3. Install hardwire mounting plate (N) to wall junction box and secure with mounting screws (M).
4. Remove cord covers and portable cord by loosening wire nuts.
5. Insert direct wire plug (O) into the bottom of fixture (C).
6. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (Q).

NOTE: It is imperative that the fixture is grounded.

7. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut (Q).
 8. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut (Q).
- CAUTION:** Do not reverse the hot and neutral connections.
9. Make sure all wire connections are tight, then carefully tuck into the junction box.

10. Install fixture (C) to hardwire mounting plate (N) and secure with screws (H).
11. Swing arm (K) & (J) to desired angle.
12. Hold handle (P) to adjust shade (L) to desired angle.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

RALPH LAUREN

